

LAQUAact

Quick Manual

Portable Dissolved Oxygen Meter OM-71



<http://www.horiba-water.com>


HORIBA
Scientific

CODE:GZ0000340574

August, 2013 © 2013 HORIBA, Ltd.

Preparation

① Connect the electrode to the meter

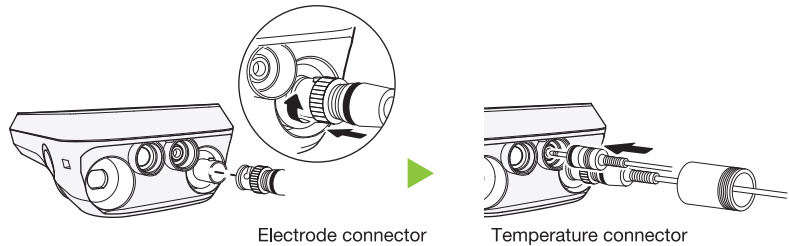

② Press the power key of the meter




Press 

Calibration

If high precision measurement is necessary, perform calibration using the standard solution.
About calibration using the standard solution, refer to the instruction manual.

① Enter the calibration mode

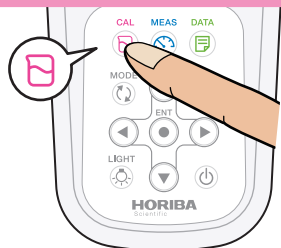


Press



② Start the air calibration

Hold the electrode still in clear air.



Confirm that the instantaneous value is stable, then press .


When **HOLD** changes from the blinking state to the lit state and calibrated value appears, calibration is complete.



To measurement

Measurement

① Enter the measurement mode

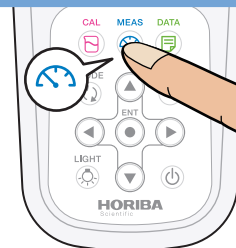

Press

② Start the measurement



Immerse 6 cm or more.

Press



When **HOLD** changes from the blinking state to the lit state, measurement is complete.

NOTE

When the batteries run out or the meter will not be used for a long period, remove the batteries.