

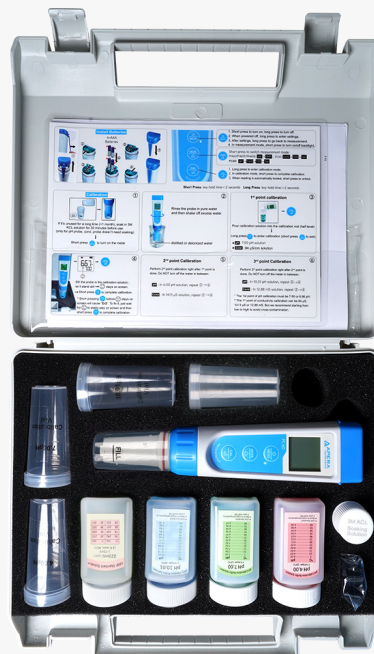


PR60F Premium pH/ORP Tester Kit

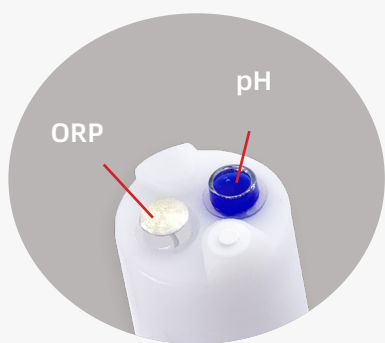


Main Features

- **pH/ORP dual-channel simultaneous measurement.**
- Suitable for general water solutions, such as hydroponics, aquaculture, swimming pools and spas, water treatment, skincare products, environmental monitoring as well as **flat surface measurement** such as skin, food, soil, etc.
- **Double-junction electrode is resistant** to reference contamination, significantly extending electrode service life.
- The **flat platinum ORP sensor with macromolecule coating** is **40% faster in response rate and resistant to surface oxidation.**
- **StableRead™ function** available for easy measurement taking — no more guesswork on when to record the reading. Simply tap  and the fully stabilized reading will pop up shortly just like a thermometer.
- **Intelligent chip design**, advanced measurement technology, with 1 - 3 points automatic calibration, 0 - 50°C automatic temperature compensation, measurement alarm, manual/automatic locking, calibration prompts and other intelligent functions.
- **IP67 waterproof grade**, suitable for both lab and in-field use.
- **Everything in a rugged carrying case** — calibration solutions, sample vials, and other accessories.

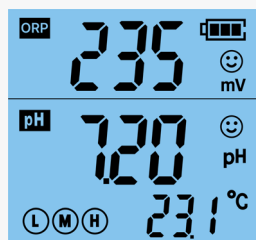

Double-color backlit LCD display

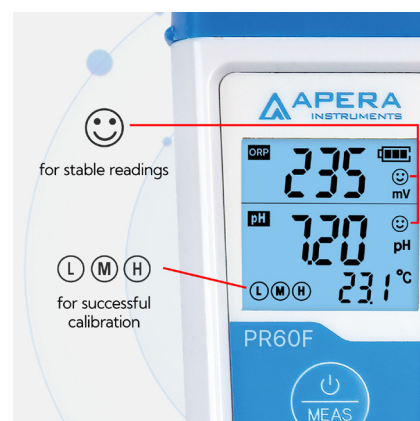

Stable icon

Technical Parameters

pH	Measuring range	0 – 14.00pH
	Resolution	0.1/0.01pH
	Accuracy	± 0.01pH ± 1 digit
	Calibration	1 – 3 points Auto. Calibration
	Automatic temperature compensation	0 – 50°C (32 – 122°F)
ORP (mV)	Measuring range	-1000 mV to 1000 mV
	Accuracy	±0.2% F.S
	Calibration	1 point manual calibration
Temperature	Measuring range	0 – 50°C (32-122°F)
	Accuracy	±0.5°C
Other	Low Voltage Alert	 flashes as a reminder to change the batteries.
	Auto power off	The instrument will shut down automatically if there is no operation for 10 minutes.
	Power supply	AAA Alkaline Battery *4
	Dimension and weight	Meter: 40×40×178mm/133g; Suitcase: 255×210×50mm/438g.
	Waterproof grade	IP67
	Working Temperature and Humidity	5~50°C, <70%
	Certification	CE, RoHS, FCC

What's in the Kit

PR60F pH & ORP Pocket Tester	1
pH4.00 Calibration Buffer Solution	1
pH7.00 Calibration Buffer Solution	1
pH10.01 Calibration Buffer Solution	1
pH4.00 Calibration Vial	1
pH7.00 Calibration Vial	1
pH10.01 Calibration Bottle	1
222 mV ORP Standard Solution	1
222 mV ORP Calibration Vial	1
3M KCL Soaking Solution	1
Lanyard	1
Instruction manual	1
Carrying case	1